

Jaguar XJ8 1998-2003

Upper Shock Bushing Kit

Installation Instructions

1) Disconnect upper shock from upper shock mounting plate

2) Remove shock mounting bracket from vehicle (Figure 1)

3) Separate upper shock mounting bushings from upper shock plate. Using a 12mm bolt, on the topside of bracket place bolt in mounting hole of bushing and push collar out using a hydraulic press and remove worn upper and lower bushings. (Figure 2)

4) Replace worn bushings with new bushings and reassemble as they came apart. Press together with hydraulic press.

5) Reinstall upper shock bracket onto vehicle

6) Reinstall upper shock to plate

Figure 1

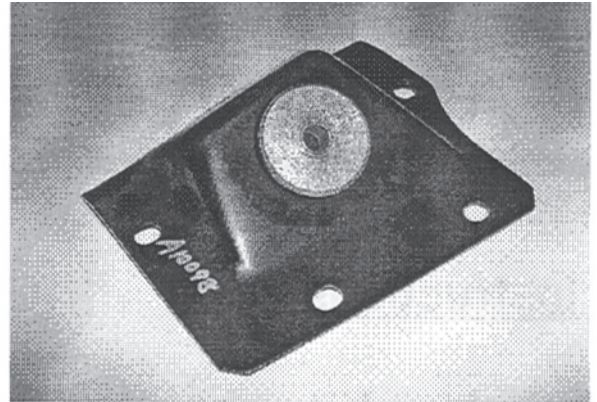


Figure 2

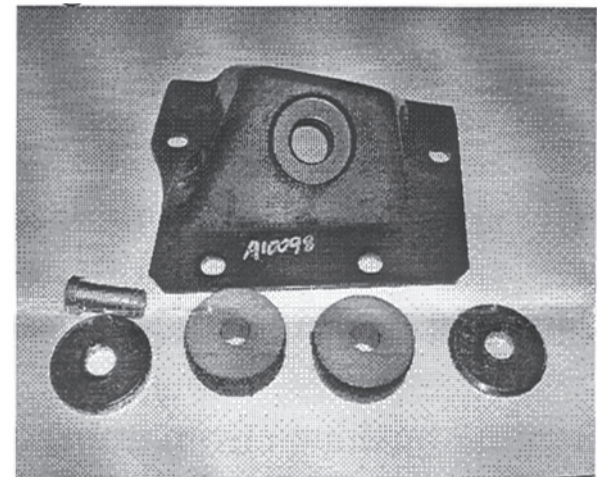


Figure 3

